



# Maintenance Schedule

## Maintenance Schedule

Item	Function Required	Weekly	3 Months or 3,000 Miles	6 Months or 6,000 Miles	12 Months or 12,000 Miles
Brakes	Test that they are operational.	At Every Use			
Brake Adjustment	Adjust to proper operating clearance.		•		
Brake Magnets	Inspect for wear and current draw.			•	
Brake Linings	Inspect for wear or contamination.				•
Brake Controller	Check for correct amperage and modulation.			•	
Brake Cylinders	Check for leaks, sticking.				•
Brake Lines	Inspect for cracks, leaks, kinks.				•
Trailer Brake Wiring	Inspect wiring for bare spots, fray, etc.				•
Breakaway System	Check battery charge and switch operation.	At Every Use			
Hub/Drum	Inspect for abnormal wear or scoring.				•
Wheel Bearings and Cups	Inspect for corrosion or wear. Clean and repack.				•
Seals	Inspect for leakage. Replace if removed.				•
Springs	Inspect for wear, loss of arch.				•
Suspension Parts	Inspect for bending, loose fasteners and wear.			•	
Hangers	Inspect welds.				•
Wheel Nuts and Bolts	Tighten to specified torque values.		•		
Wheels	Inspect for cracks, dents, or distortion.			•	
Tire Inflation Pressure	Inflate tires to mfg's. specifications.	•			
Tire Condition	Inspect for cuts, wear, bulging, etc.		•		